

MICROWAVE

● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

● Intended use

This product is intended for heating and preparing food. Do not use it for any other purpose.

The product is designed only for use in private household and must not be used in medicinal or commercial areas.

The manufacturer is not liable to damage caused by improper use.

● Scope of delivery


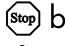


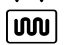

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packing materials before use.

- 1 x Microwave
- 1 x Turntable
- 1 x Turntable holder
- 1 x Rollers
- 1 x Instruction manual


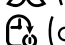
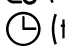
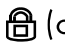




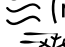
● Description of parts

Before reading, unfold the page containing the illustration and familiarize yourself with all functions of the product.

(Fig. A)








- 1 Power cord with power plug
- 2 Turntable with rollers and turntable holder
- 3 Grill stand
- 4 Door seal
- 5 Door with door handle
- 6 Cooking chamber
- 7 Program overview
- 8 Display
- 9  button (timer/clock)
- 10 **COMB.** button (grill/microwave)
- 11  button (stop/clear)
- 12  rotary knob (automatic cooking/time/weight) with button (start/quick start)
- 13  button (defrost)
- 14  button (grill)
- 15  button (microwave)

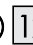
(Fig. B)

- 16 **AUTO** (automatic cooking)
- 17  (fan)
- 18  (countdown)
- 19  (timer)
- 20  (child-proof lock)
- 21 Value display
- 22  (combination 2)
- 23  (combination 1)
- 24  (grill)
- 25  (microwave)
- 26  (defrost)
- 27 Menu selection

● **Operation**



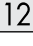

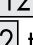

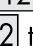

i **NOTES:**

- There may be a faint odour the first time the product is used. Make sure there is sufficient ventilation in the area.
- When the product is first plugged in, a beep sounds. The display [8] shows "0:00".
- The product will switch to standby mode if no button is pressed for 60 seconds in program selection mode.
- During cooking, if you press  [11] once, the program will be paused. Press  [12] to resume the program. If you press  twice, the program will be cancelled.
- After cooking has ended, the value display [21] shows "End". 5 beeps sound every 2 minutes until you press  [11] or open the door [5].
- During operation, if you press a button, the buzzer will ring once. However, if you press a button, which can not be used for the current operation, the buzzer will ring twice.
- The product has an energy saving mode. In standby mode, or after cooking has ended, the backlight of the display [8] will be dimmed, if you do not press any button or rotate  [12] within 5 seconds. Press any button or rotate  to brighten the backlight.
- During express cooking, defrosting, microwave cooking, or grill and combination cooking, you can increase the cooking time by 30 seconds each time you press  [12].

- The maximum cooking time for all manual programs is 95 minutes. Rotate  [12] clockwise to set the time from 10 seconds to 95 minutes.

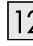

Time range	Interval
<5 minutes	10 seconds
5-10 minutes	30 seconds
10-30 minutes	1 minute
>30 minutes	5 minutes

● **Setting the clock**

1. In standby mode, press and hold   [9] for 3 seconds. The 12 hour format is selected. The display [8] shows "Hr12".
2. Rotate  [12] to select 12 or 24 hour format.
Hr12: 12 hour format
Hr24: 24 hour format
3. Press  [12] to confirm.
4. Rotate  [12] to set the hours.
5. Press  [12] to confirm.
6. Rotate  [12] to set the minutes.
7. Press  [12] to confirm.

- i** **NOTE:** The clock must be set again if the product has been disconnected from the power supply.

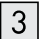
● **Express microwave cooking**



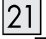
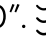

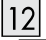



- In standby mode, press  [12] once. The display [8] shows "0:30".  [25] flashes. The cooking process starts automatically at full power. Each press increases the cooking time by 30 seconds. The maximum cooking time is 95 minutes.


● Microwave mode

Accessory used:

Turntable with rollers and turntable holder

⚠ WARNING! Risk of fire! Never use the grill stand  or other metallic objects in microwave mode. Metals reflect the microwave radiation and this leads to the generation of sparks. This can cause a fire and irreparably damage the product!

1. In standby mode, press  . The value display  shows "P800".  lights up.
2. Rotate  to select another power level. Rotate clockwise:
P800→P100→P200→...→P800
Rotate counter-clockwise:
P800→P700→P600→...→P800
3. Press  to confirm.
4. Rotate  to set the cooking time. The max. cooking time is 95 minutes.
5. Press  to confirm.  flashes.



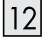
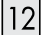

i NOTE: During cooking, you can check the power level by pressing .


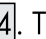
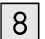
● Grill mode

Accessory used:

Grill stand

i NOTE: Grill cooking is particularly useful for thin slices of meat, steaks, chops, kebabs, sausages and pieces of chicken. It is also suitable for hot sandwiches and au gratin dishes.

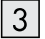
1. In standby mode, press  .
2. Rotate  to set the cooking time. The max. cooking time is 95 minutes.
3. Press  to confirm.  lights up.


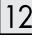


i NOTE: During cooking or when operation is paused, you can check the cooking mode by pressing  . The display  shows "G" for grill mode for 3 seconds.

● Combination mode

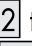
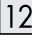



Accessory used:

Turntable with rollers and turntable holder

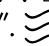

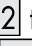
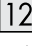
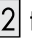

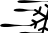
⚠ WARNING! Risk of fire! Never use the grill stand  or other metallic objects in combination mode. Metals reflect the microwave radiation and this leads to the generation of sparks. This can cause a fire and irreparably damage the product!

- In standby mode, press **COMB.** 10.
The value display 21 shows "C-1". The display 8 shows  23.
- Rotate  12 to select "C-2" or "C-1".
C-1: Fish, au gratin dishes (The display 8 shows  23)
C-2: Puddings, omelettes, baked potatoes, poultry (The display 8 shows  22)

Mode	Grill mode	Microwave mode
Combination 1 (C-1)	70 %	30 %
Combination 2 (C-2)	45 %	55 %

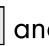
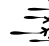

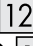



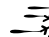
- Press  12 to confirm.
- Rotate  12 to set the cooking time. The max. cooking time is 95 minutes.
- Press  12 to confirm.  22 (for C-2) or  23 (for C-1) flashes.

● Defrosting by time

- In standby mode, press ****** 13. The value display 21 shows "dEF1".  25 and  26 light up.
- Press  12 to confirm.
- Rotate  12 to set the defrosting time. The max. defrosting time is 95 minutes.
- Press  12 to start the process.  25 and  26 flash.


● Defrosting by weight

i NOTE: The time and the defrosting power are adjusted automatically once you entered the weight of the food to be defrosted.

- In standby mode, press ****** 13. The value display 21 shows "dEF1".  25 and  26 light up.
- Rotate  12 to select "dEF2".
- Press  12 to confirm.
- Rotate  12 to set the weight of the food to be defrosted within a range of 100 to 1800 g.
- Press  12 to start the process.  25 and  26 flash.

i NOTE: During defrosting, the display 8 will show "turn" after 2/3 of the time has passed and 2 beeps will sound. If you do not turn the food over, the process will continue until the time has elapsed.

If the defrost time is shorter than 90 seconds, 2 beeps will sound after 2/3 of the time has passed. The display 8 will not show "turn" in this case.

- Open the door 5. The time on the display 8 is stopped.
- Turn the food over. Always use oven gloves or pot holders because the food becomes hot.
- Close the door 5.
- Press  12 to continue the process.

Defrost weight	Defrost time
100 g	4 minutes
200 g	6 minutes
300 g	8 minutes
400 g	10 minutes
500 g	12 minutes
600 g	14 minutes
700 g	16 minutes
800 g	18 minutes
900 g	20 minutes
1000 g	22 minutes
1100 g	24 minutes
1200 g	26 minutes
1300 g	28 minutes
1400 g	30 minutes
1500 g	32 minutes
1600 g	34 minutes
1700 g	36 minutes
1800 g	38 minutes

● Delay cooking function

1. In standby mode, select a cooking program first.
2. Press . lights up.
3. Rotate to set the hours for the desired start time.
4. Press to confirm.
5. Rotate to set the minutes for the desired start time.
6. Press to start the delay cooking. The corresponding icon for the cooking program, the time display, and flash.

❗ NOTES:

- The cooking process starts automatically after the countdown has finished.
- During the time delay, you can cancel the program by pressing .
- Following functions are not available for the countdown function: Express cooking and defrosting by time/weight
- You can check the current time by pressing . The display will change back to the setting time after 3 seconds.

● Child-proof lock

- ❗ **NOTE:** Use this feature to prevent unsupervised operation of the product by children.

- **Activating:** Press and hold for 3 seconds. A beep sounds. lights up.
- **Deactivating:** Press and hold for 3 seconds. A beep sounds. goes off. Another beep sounds.

● Automatic cooking modes

1. In standby mode, rotate anti-clockwise once. Then rotate to select another code (see following table).
2. Press to confirm.
3. Rotate to set the weight of the food or the number of servings.
4. Press to start the process.

i NOTE: The result of automatic cooking depends on factors such as the shape and size of food, the desired degree of doneness of certain foods and how you place the food in the product. If the result is not satisfactory, adjust the cooking time accordingly.

A-01 (Pasta)

- Use a microwave-safe container.
- Add the desired quantity of pasta. The net pasta weight without water is counted.
- Add the suitable amount of water to the container.
- Select the corresponding net pasta weight and start the process.
- Once the process has finished, leave the pasta to rest for 2–3 minutes and drain the water.

A-02 (Fish)

- Use a microwave-safe plate. Spread the fish evenly.
- Season the fish to your personal preference (e.g. with butter or fat).
- Select the corresponding weight and start the process.

A-03 (Rice)

- Use a microwave-safe container.
- Add water to the container. The ratio is 2 ml of water for 1 g of rice. You can adjust the ratio to your personal preference.
- Let the rice soak in water for 3 minutes.
- Select the corresponding weight and start the process.

A-04 (Chicken)

- Use a microwave-safe plate.
- Season the chicken to your personal preference.
- Select the corresponding weight and start the process.
- The display **8** will show “turn” after 2/3 of the time has passed and 2 beeps will sound.
- Turn the chicken over.
- Press **12** to continue the process.

A-05 (Heating)

- Use a microwave-safe plate.
- Select the corresponding weight and start the process.

A-06 (Potatoes)

- We recommend using unpeeled potatoes of the same size.
- Use a microwave-safe plate. Spread the potatoes evenly.
- Prick the potato peel several times.
- Select the corresponding weight and start the process.

A-07 (Meat/Joints)

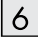
- Use a microwave-safe plate.
- Season the meat/joint to your personal preference.
- Select the corresponding weight and start the process.
- The display **8** will show “turn” after 2/3 of the time has passed and 2 beeps will sound.
- Turn the meat/joint over.
- Press **12** to continue the process.

A-08 (Popcorn)

- Add 100 g of popcorn into a microwave-safe bowl.
- Start the process.


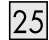

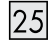

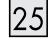

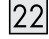

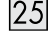

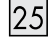

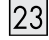

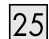

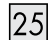

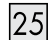
A-09 (Liquids)

- Use a microwave-safe container (e.g. mug or glass).
- Select the corresponding number of servings and start the process.

i NOTE: Place a glass rod in the liquid and leave the container in the cooking chamber  for 20–30 seconds to prevent sudden boiling.

A-10 (Vegetables)

- Use a microwave-safe container.
- Select the corresponding weight and start the process.

Code	Food/function	Weight range	Time range	Microwave/grill function display
A-01	Pasta	100 g, 200 g, 300 g	20–30 minutes	  (microwave)
A-02	Fish	200 g, 300 g, 400 g, 500 g, 600 g	3–8:20 minutes	  (microwave)
A-03	Rice	150 g, 300 g, 450 g, 600 g	18–33 minutes	  (microwave)
A-04	Chicken	800 g, 1000 g, 1200 g, 1400 g	37–46 minutes	  (combination 2)
A-05	Heating	200 g, 300 g, 400 g, 500 g, 600 g, 700 g, 800 g	1:30–4:30 minutes	  (microwave)
A-06	Potatoes	230 g, 460 g	5–8 minutes	  (microwave)
A-07	Meat/Joints	100 g, 200 g, 300 g, 400 g, 500 g	9–21 minutes	  (combination 1)
A-08	Popcorn	100 g	2:40 minutes	  (microwave)
A-09	Liquids	1–3 servings	1:30–3:50 minutes	  (microwave)
A-10	Vegetables	200 g, 300 g, 400 g, 500 g, 600 g	3–7 minutes	  (microwave)